

## A-arm Protector Installation Instructions

Tools needed:

metric hand tools  
electric drill w/ 3/16" drill  
pop-rivet gun  
Sharpie marker

The following instructions apply for a-arm installation on the FX Nitro or FX Phazer models.

The installation instructions shown below are illustrated with the sled elevated. It is not necessary to elevate the sled.

1. Remove bolt connecting sway bar to the drop link on both sides of the sled. Let the sway bar dangle.



2. Put all three rubber coated clamps over the a-arms




3. Hold a-arm protector up to a-arm and fit front two rivets through the a-arm protector, through the clamp, and then put the rivet backer on the rivet.
4. Pull front two rivets slightly – DO NOT POP RIVET ALL THE WAY.



5. Hold a-arm protector up flat to the a-arm, and locate the rear clamp in a desired position.

6. Mark the place of the hole for the rear clamp with a sharpie marker.

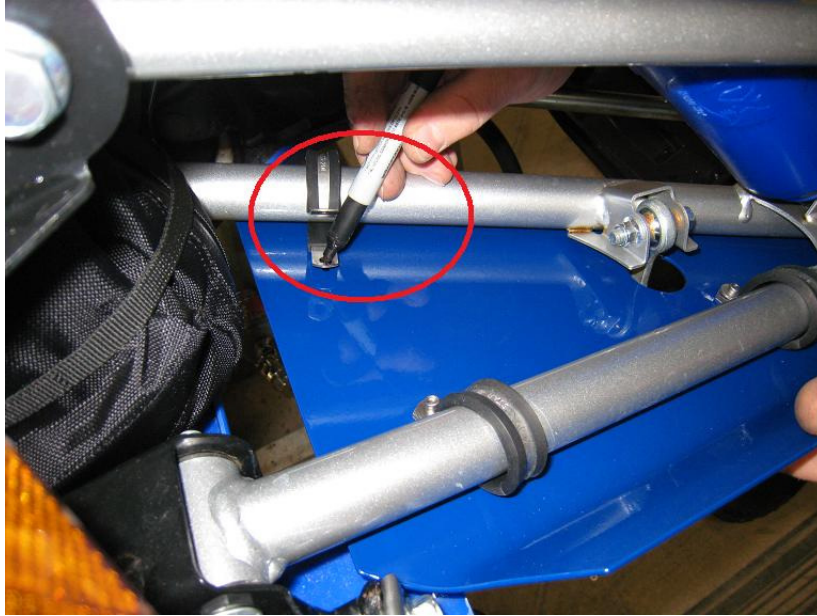

7. Rotate the a-arm protector down, and drill the marked hole with a 3/16: diameter drill.



8. Hold a-arm protector back up in place.

9. Fit the rear rivet up through the a-arm protector, through the clamp, and put the rivet backer on the rivet.



10. Pop the rear rivet completely.
11. Go back to the front two rivets and pop them completely.



12. Repeat process for other side.
13. Reinstall bolts connecting the sway bar to the sway bar link.

14. You're done!

